


行程	30	50
L1	112	132
L2	90	110
L3	36	46
L4	19	29
L5	24	29

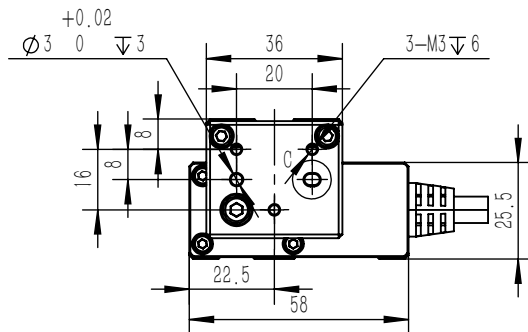

安装说明

- 1、主体固定时, 请使用同一安装面上的所有螺丝孔固定;
- 2、拧紧螺栓时, 不得超过螺纹孔深度。